

# Reversible Bucket Hat

## What you need:

- Iron & Ironing Board
- Pencil, Scissors & Clips
- Sewing Machine & Thread
- Outdoor Fabric
- Fusible Vinyl



Step 1: Iron the Fusible Vinyl to the right side of your chosen fabrics. Use Craft and Sewing Clips to trace out pattern pieces.  
*\*Note: There are cut numbers on each pattern. Ensure that half of your patterns are cut from a different fabric than the other.*


Step 2: Cut out and prep the pattern pieces.  
*Tip: Any creases after the cutting process can be fixed with a low heat iron on the wrong side.*



Step 3: Sew Head Band pieces together at 1/2" (2.55cm). Use clips to hold in place.



Step 4: Sew Hat Top to Head Band at 1/2" (2.55cm). Turn inside out and finger press seams.

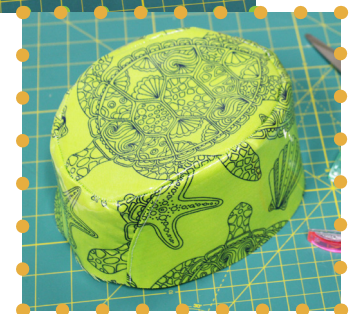



Step 5: Sew Head Band **BOTTOM** side seams to each other at 1/2" (2.55cm). Top stitch if needed.

Step 6: Attach Hat Rim pieces together at 1/2" (2.55cm).

Step 7: Line up the Head Band seam to the middle of the Hat Rim (where the POF line was). This will be the back of the hat.



Step 8: Sew Head Band **BOTTOM** to Hat Rim at 1/2" (2.55cm).

Step 9: Attach, at 1/2" (2.55cm), the sewn pieces in Step 8 & Step 4. Turn one of the hats inside out.



Step 10: Top stitch the Hat Band Seam **UPWARDS** on one hat, and **DOWNWARDS** on the other. This ensures there is less bulk when the pieces are attached.

Step 11: Put the hats together and sew around the edge of the Hat Rims. Sew 1/2" (2.55cm) away from the edge. Then sew 1" (2.55cm) away from the stitch line.






Step 12: Sew Hat Rim at 1/2" (2.55cm) from the Hat Band attachment. Then sew 1" (2.55cm) away from the stitch line.

Step 13: Zig Zag stitch the edge of Hat Rim to finish your Reversible Bucket Hat.



# Reversible Bucket Hat

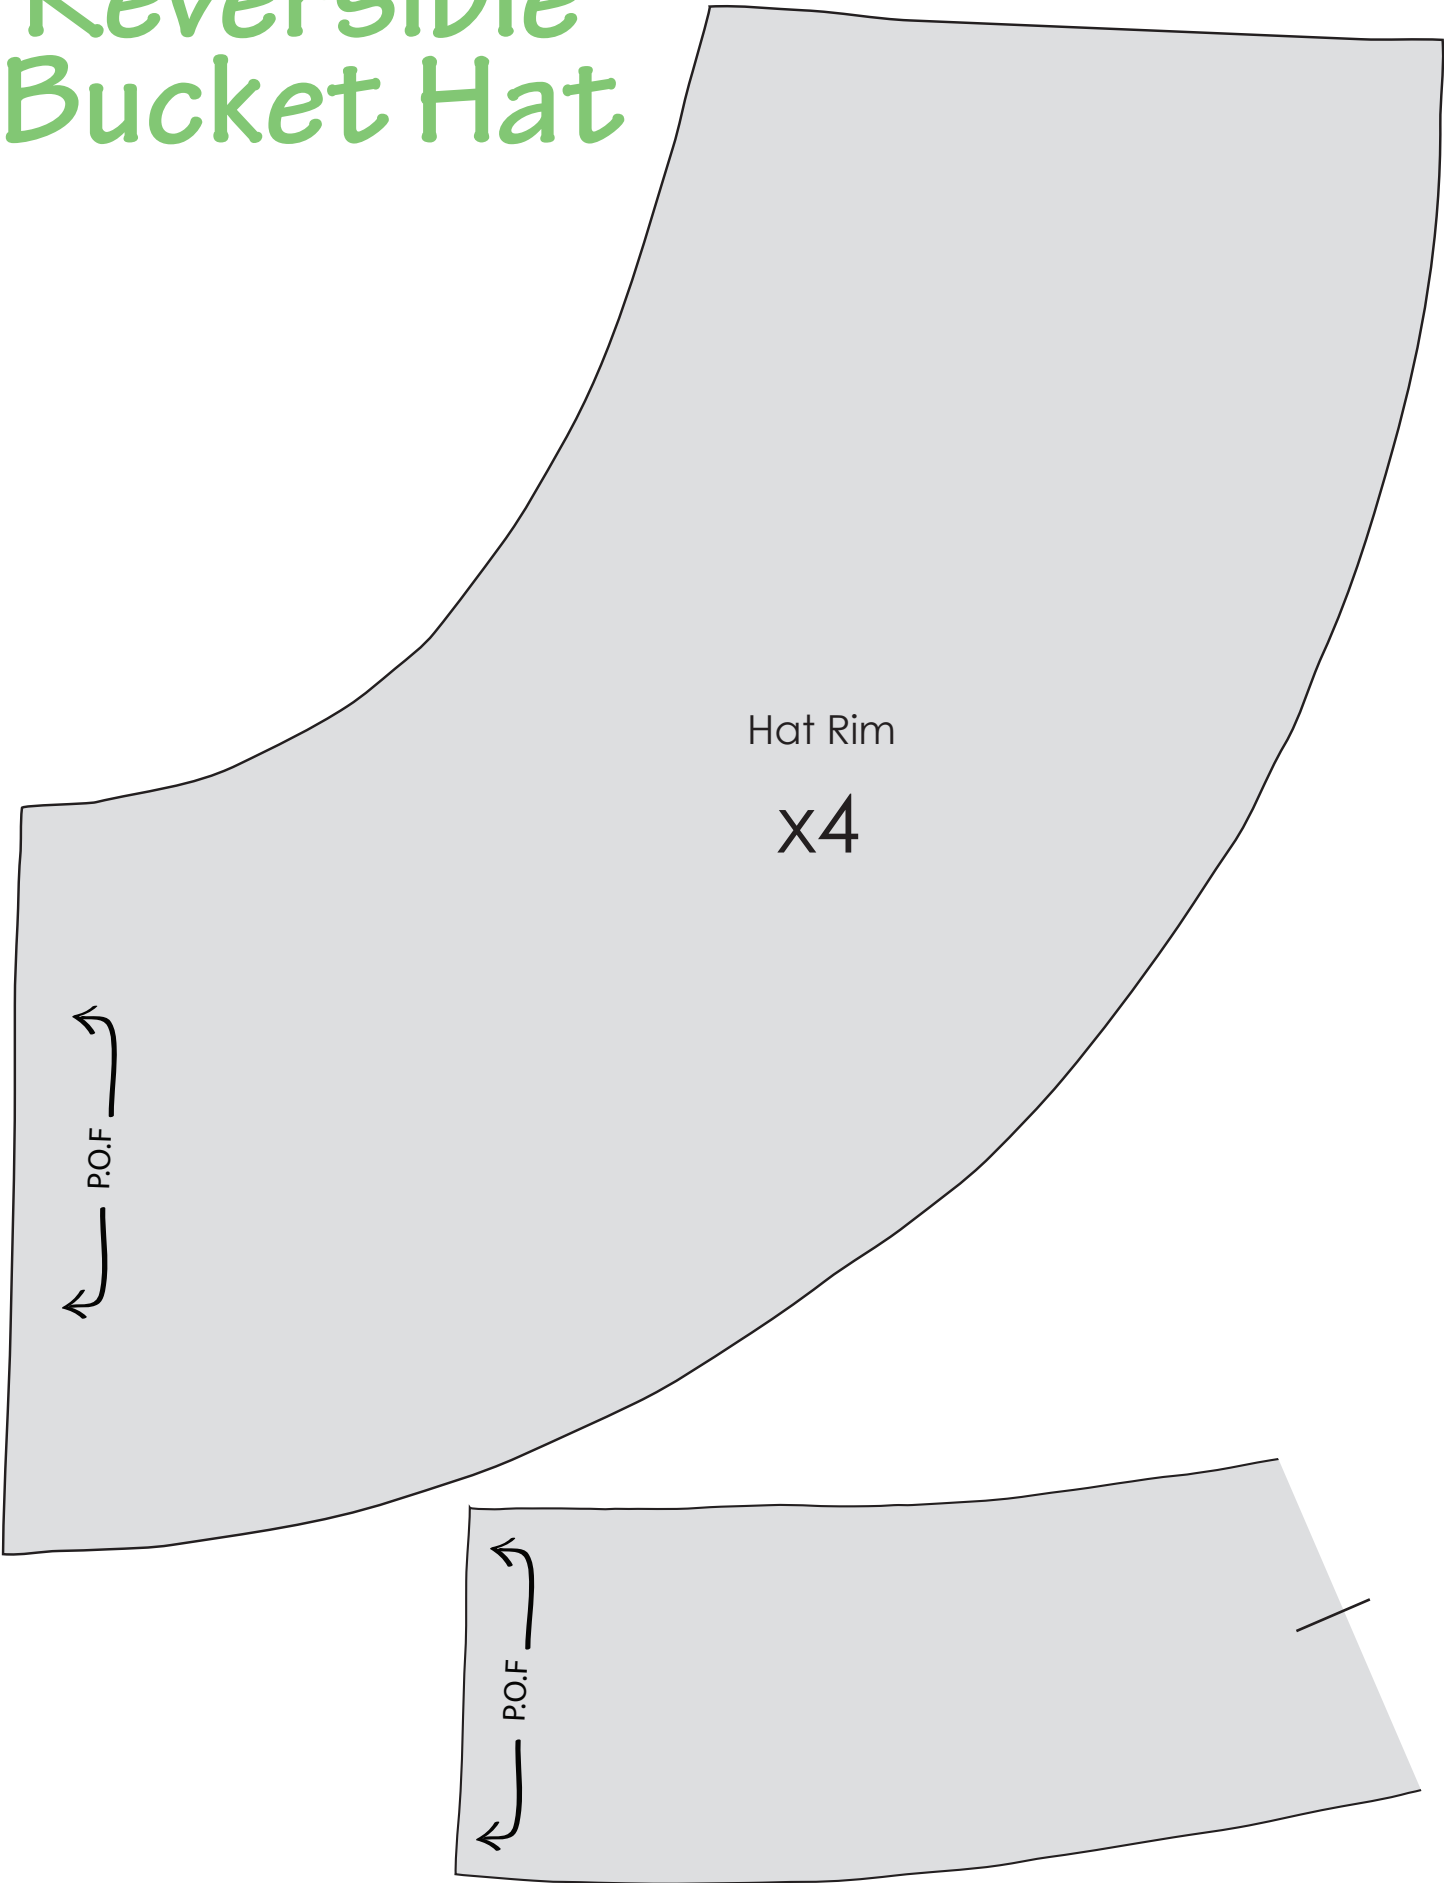

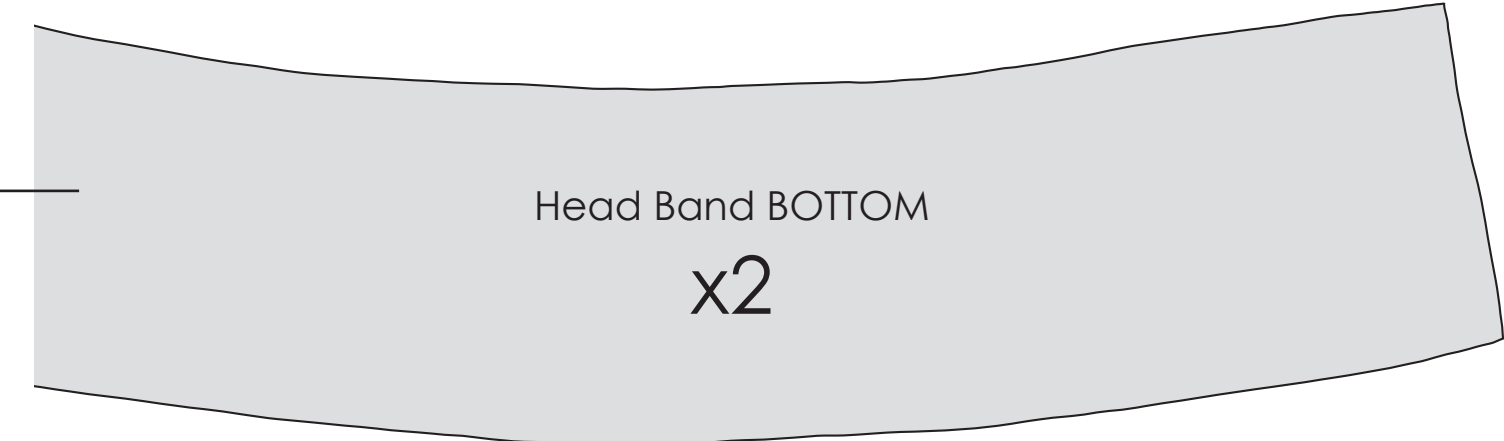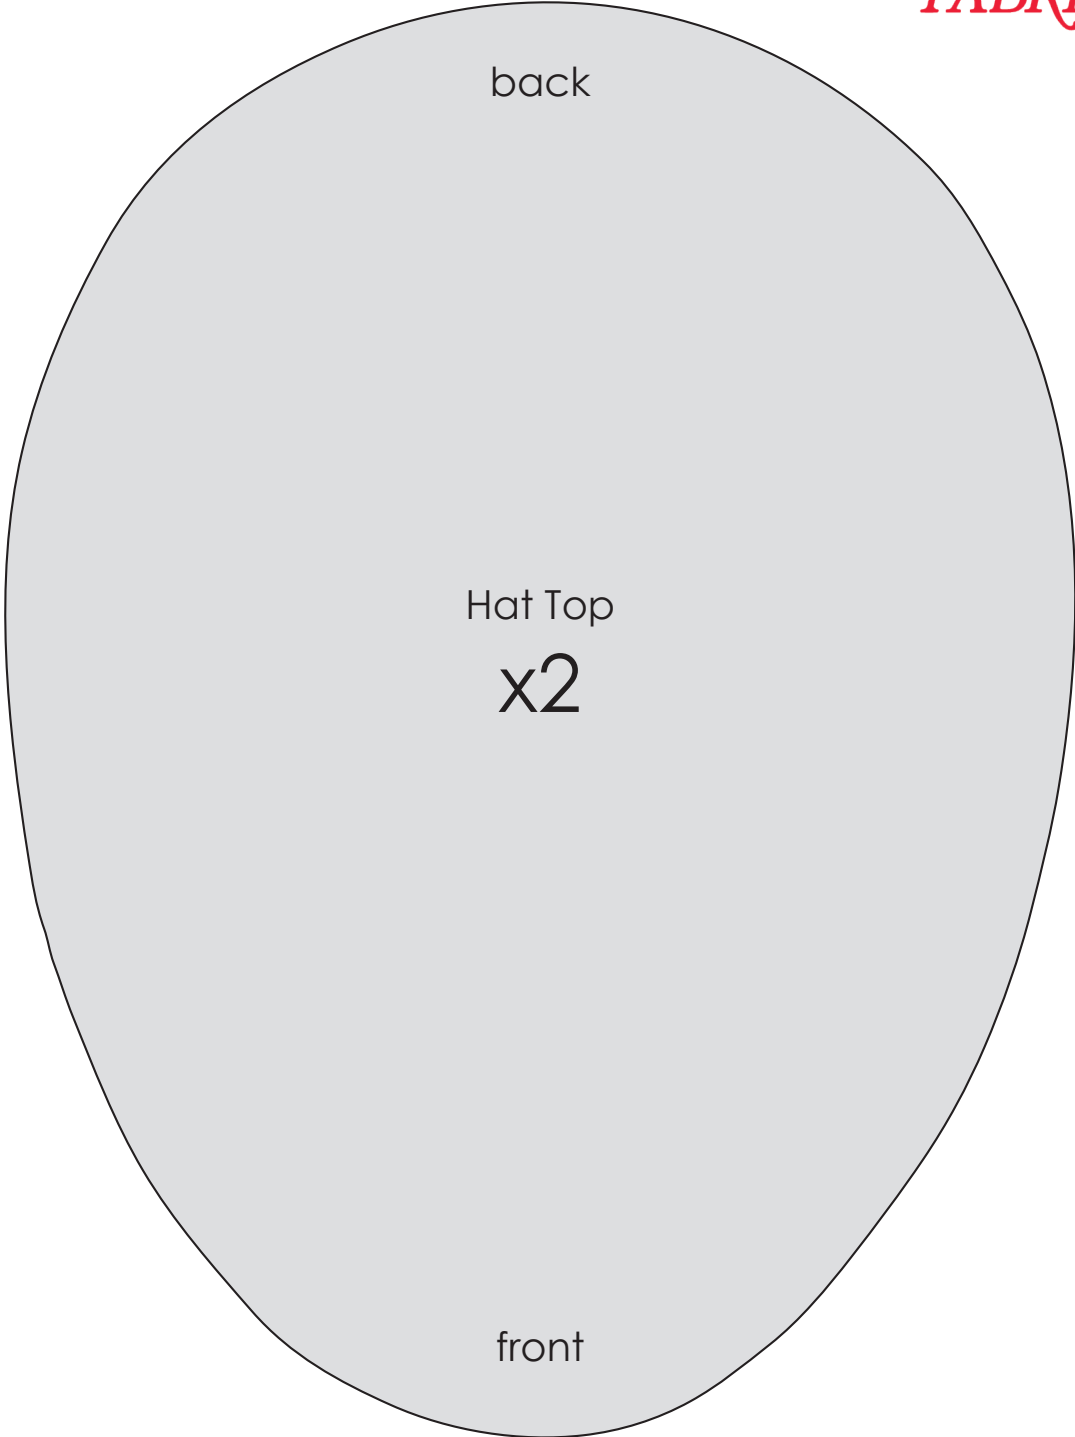

Note: P.O.F - Place On Fold

Fold material in half, and place P.O.F end on the fold before cutting.

